


**Mounting to a pole...**



**Mounting to a wall...**

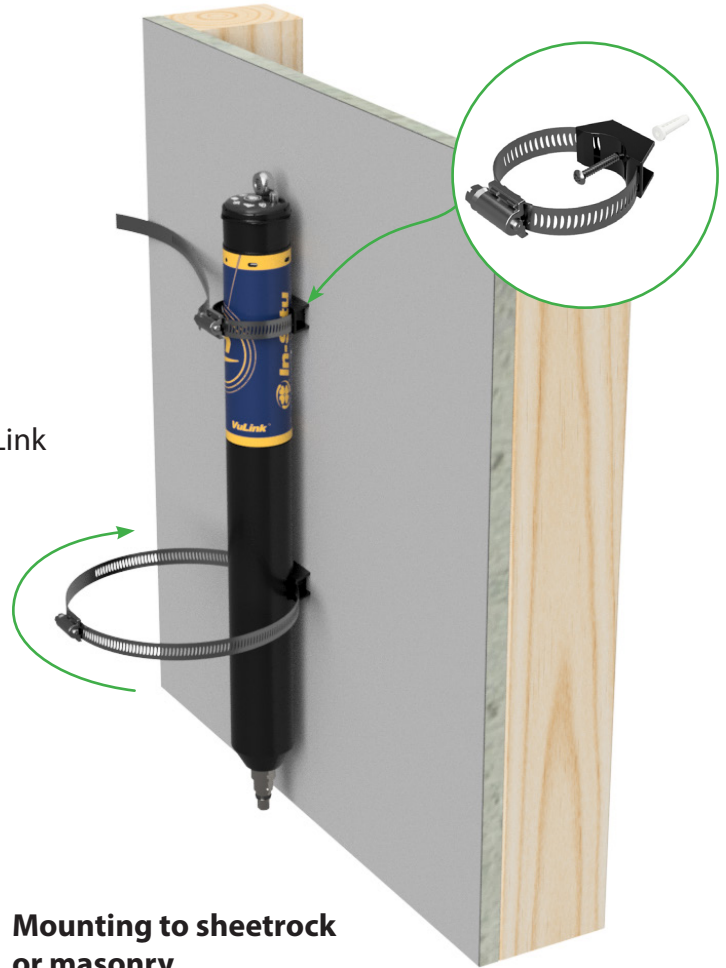

**Mounting to sheetrock or masonry...**

- 1 Drill a 1/4" pilot hole for each black mounting bracket.
- 2 Insert the plastic drywall anchors into the pilot holes. Tap the anchors lightly with a hammer until they are fully inserted.
- 3 Place a screw in each bracket. Drive the screws into the anchors until snug.
- 4 Tighten the clamps to secure VuLink.

**Mounting to plywood or wood...**

- 1 Drill a 9/64" pilot hole for each black mounting bracket.
- 2 Place a screw in each bracket. Drive the screws into the wall to secure the brackets.
- 3 Tighten the clamps.



The mounting kit is not intended to support the weight of cables and instruments. Use additional hardware to suspend instrumentation.